 
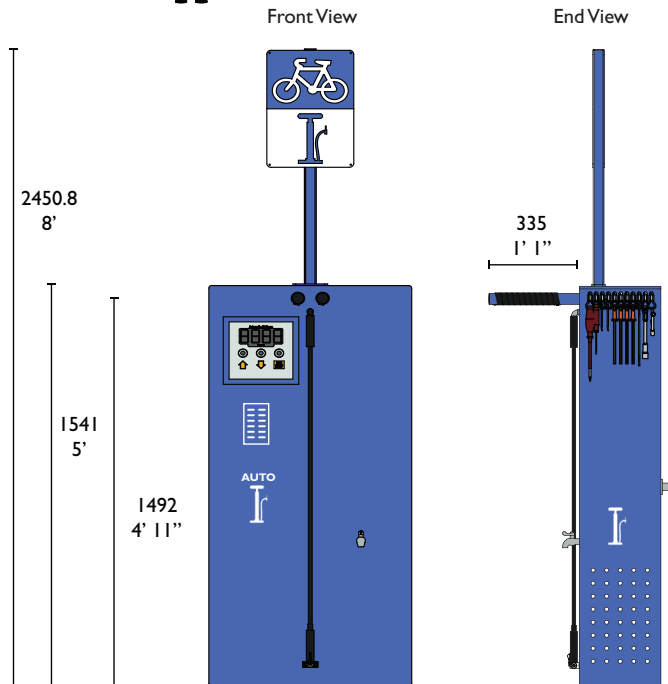 
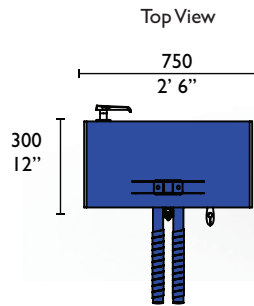 


## Repair Stations

1 734 207 9700

### BBS07 Automated Pump & Repair Station

For busy cycling areas. Cyclist sets tyre pressure and attaches the valve. Tyre will then automatically inflate to the set pressure.

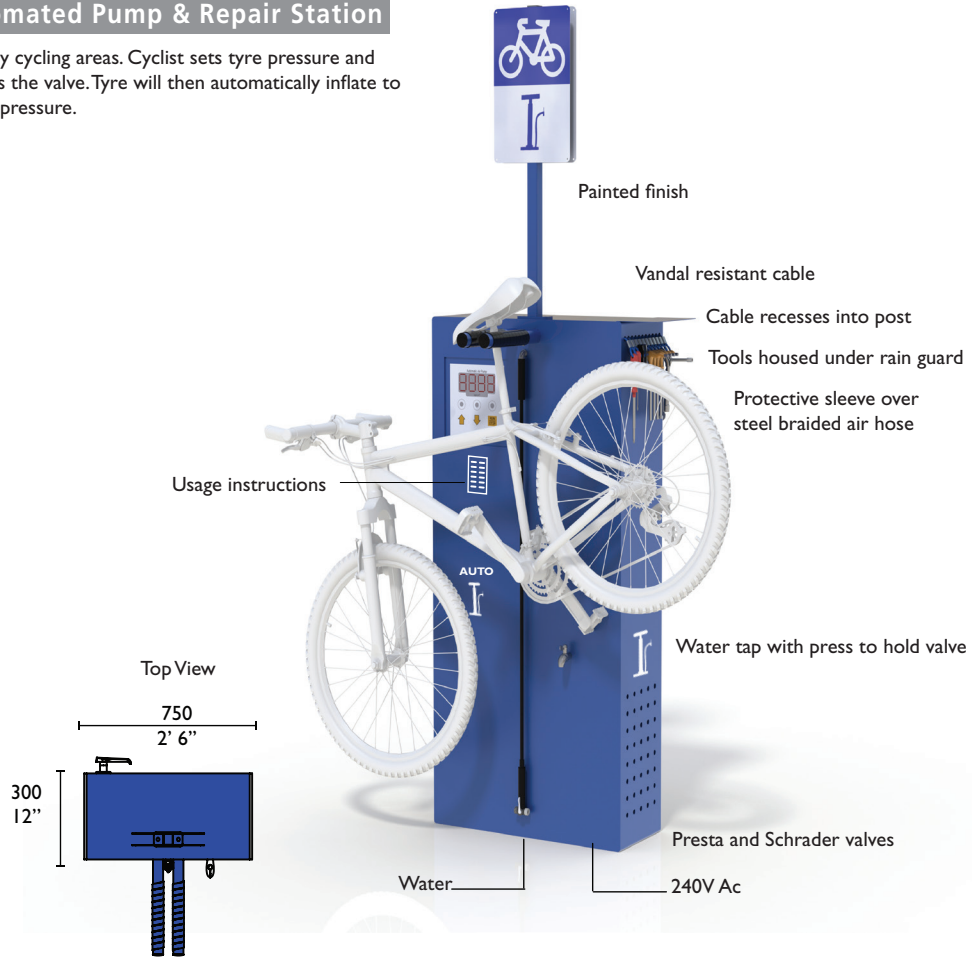

#### Pump Usage Instructions:

1. Attach valve to tyre and check recommended pressure on the tyre.
2. Enter the desired tyre pressure in Psi.
3. Hit the start button.
4. Pump will auto inflate the tyre to the desired pressure.
5. Once complete, the pump will beep so just disconnect the valve.

#### Material Specifications (General)

Automated pump 100 x 180 x 3mm {3 15/16" x 7 3/32" x 1/8"} RHS

NEW FOR  
2017